

Butler

MOBILITY PRODUCTS



Indoor
Residential
Inclined
Platform
Lift

Butler
MOBILITY PRODUCTS

www.buttermobility.com
571 Industrial Drive
Lewisberry, PA 17339
717-938-4253
sales@buttermobility.com



The Lift that Lasts.

Regain your mobility and remain in your home.

Butler Mobility's Inclined Platform Lifts (IPL) are manufactured in Pennsylvania, USA. Butler Mobility has manufactured wheelchair lifts since 1968. We produce "The Lift that Lasts" - customizing each lift and installing it into your home, to provide independence and the convenience you deserve.


IPLs are custom built to your size specifications and needs.
Our lifts are easy to install and will maintain the structure of your home.
No modifications are required to install our lifts, nor will the lift block the stairway.

Each of the two rails on our IPL take up just four inches of stair width when the unit is not in use, ensuring the safety and convenience of family members and others traversing the stairs. Our lifts are designed with appearance and functionality in mind.



Our IPLs are ADA-compliant and meet or exceed all National Safety Code (ANSI/ASME code) requirements for residential use. All electrical components are UL certified and the unit requires only standard household current and a dedicated standard outlet.

Our power transmission has been certified by Met Laboratories, Inc. to ASME A 17.5/CSA B44.1-11 meeting approved standards for Elevator and Escalator Electrical Equipment. The Butler Mobility inclined platform lift is certified to lift 750 lbs. (350 kg.)

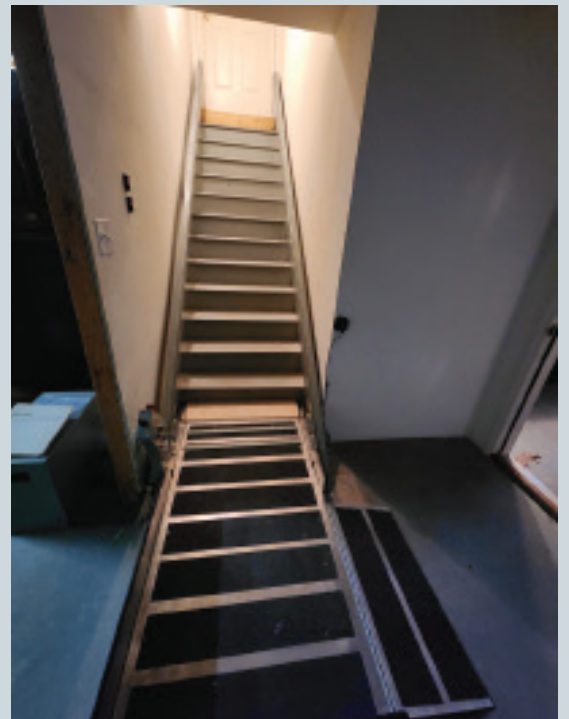

Butler Mobility

www.butlermobility.com

Our wheelchair lifts are designed and manufactured with a strong emphasis on quality, dependability and customer safety.

In the event of a power failure, the standard battery backup will bring the platform up and down as many as 5 times, depending on the age of the battery, height and load, so the user is never left stranded

Butler Mobility will be here to support you after your purchase. We guarantee that your service needs will be met quickly and handled by friendly and qualified technical staff.

Wheelchair Lift Safety Features

Our IPL can be equipped with an automatic front or side folding ramp and a guard that locks firmly in place during operation.

- Each wheelchair lift has an emergency stop button
- Battery backup is standard
- Optional key-operated controls provide additional safety
- Slack/broken chain safety
- Redundant platform safeties
- Platform safety apron
- Over speed governor
- Upper and lower limit switches
- Over travel safety switch
- Safety clutch

All Inclined Platform Lifts have three directional switches, all within easy reach of the user.

Switches are located on the platform, upper landing and the bottom landing. Keyed controls are also available. All switches are 'momentary' (constant pressure) to meet safety code requirements.

Butler Mobility

www.butlermobility.com




Available Colors



Autumn Brown




Sierra Foothills

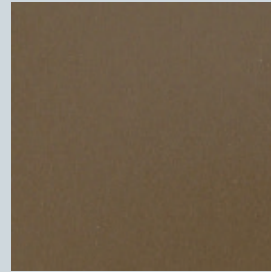

Weathered Chestnut



Shale Gray



The Inclined Platform Lift is designed with appearance and functionality in mind

All the working mechanisms are concealed to offer a seamless, attractive appearance and optimum safety in the home.

Butler Wheelchair Lift models are offered in five beautiful earth tone colors at no additional charge. These colors will not only blend well in the home but will enhance the beauty of the stairway. Custom coatings are also available at a small additional charge.

The platform and ramp are available in a beautiful aluminum finish. The platform is enhanced with a skid resistant material.

Installation and Service



Butler wheelchair lifts are designed for installation that couldn't be easier or less invasive. The rails attach at the top and bottom of the stairs with no modifications needed to the walls. The power unit is located at the bottom of the stairway and can be placed either on the right or left hand side of the stairs depending upon space restrictions. A wall kit is available to place the power unit through an adjoining wall, or a remote power unit extension can re-locate the power unit to a more suitable location near the stairway.

We back our indoor IPL with a limited lifetime warranty as well as nationwide customer service and maintenance, either direct with Butler Mobility or through one of our authorized dealer/installers.

Indoor IPL Limited Lifetime Warranty

2 years coverage on the battery back-up pack
Lifetime coverage on all major parts including the motor, the motor box & drive
Labor not included

Butler Mobility
www.butlermobility.com

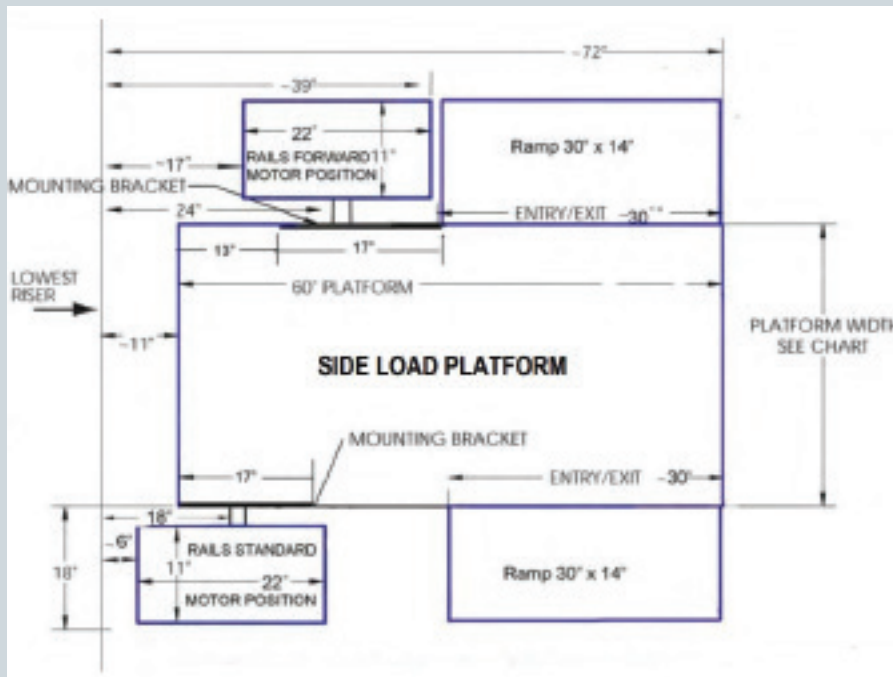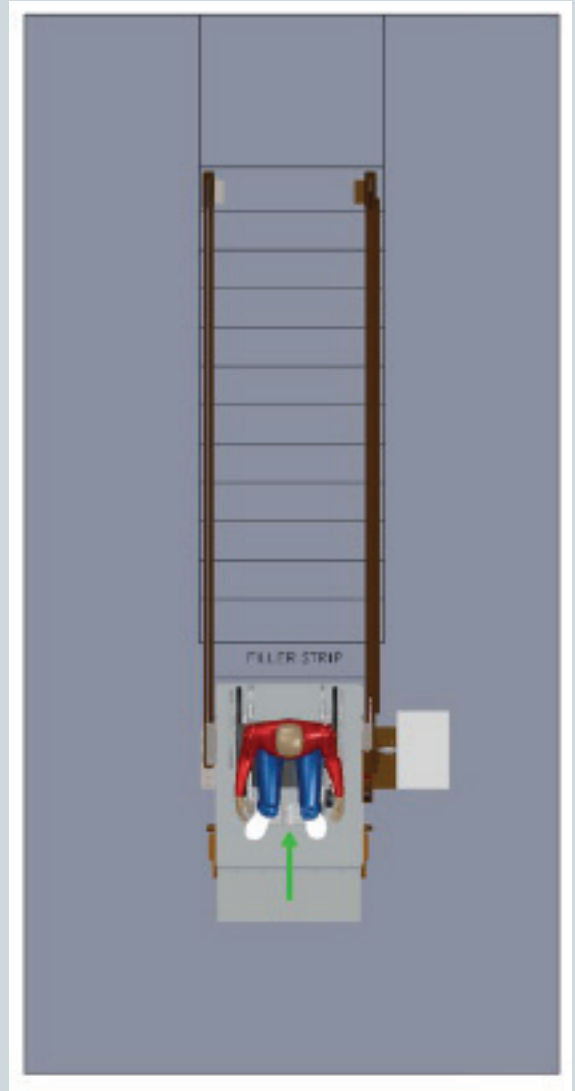

Minimum Staircase Width	Custom
Rail to Wall Distance (Incl. Rail)	4 inches
Material of Rail	Steel
Maximum Rail Length	ASME code
Rail Fixing	Custom
Wall Fixing	None
Maximum Incline	Custom
Driving Speed	19.68 feet/minute
Lifting Capacity	750 lbs.
Power Supply	110 Volt AC or 220 Volt AC
Battery	24 Volt DC (2)

Butler Mobility
www.butlermobility.com